HATOR®

User Manual **HATOR SIGNIFY® RGB PRO+ HTA516**

Features

- Plug and play, start recording immediately after connecting. - 16-bit, sampling frequency 44.1/48 KHz. High-quality recording is the
- With mic gain control, mute touch control. Easy to control sound input.
- Cardioid directional pattern will help record exactly what you need. - Steel mesh, zinc alloy body. Strong and sturdy.
- Wind protection and anti-vibration system effectively reduce noise and sound distortion.
- Especially suitable for podcasts, content creators, as well as for recording music.
- RGB lighting to decorate your workplace.
- Suitable for PC, laptop, PS4, PS5, cellphone with Type-C interface (Requires OTG Type-C adapter)
- Operating system: Mac OS, Windows 7/8/10/Vista/XP.

In the box



Product overview

- Mute on/off 2. RGB lighting
- 3. Adjusting the sensitivity of the microphone









Touch the mute area to turn on/off the recording.







RGB color illumination.



Microphone Gain: Controls the microphone gain (sensitivity). Turn the knob to the right to increase the level and to the left to decrease the level.



 
TYPE-C: Standard Type-C TYPE-C power/data connector.

 


Light Effects: Tap to change the backlight, tap and hold to turn it on or off.

Installation of the microphone on the stand


- 1. Place the mount for the metal arm stand rack on the table. 2. Insert the metal arm stand into the mounting hole and fix it.
- 3. Take the anti-vibration mount and place it on the stand. 4. Tighten the anti-vibration mount on the metal arm stand.
- 5. Adjust the mounting angle.
- 6. Place the microphone on the anti-vibration mount.
- 7. Attach the microphone.





Connecting to PC

 Connect the microphone directly to the computer with a USB Type-A cable



Connection to smartphones and other devices with USB Type-C

To use this USB microphone with Type-C ports, you need to get Type-C to Type-C cable (not included).

Recording settings

For Windows OS

- 1. Open the sound control panel on the "Recording" tab.
- 2. To start working with the microphone, select "HATOR
- Signify" and set as default. 3. Then all sound will be recorded from the HATOR microphone.
- 4. Adjust the microphone volume using the control on the microphone.

For macOS®

- 1. Open the sound control panel 2. Select "HATOR Signify" as the default input
- 3. Then all the sound will be recorded from the HATOR microphone.



Specifications

Model	Signify RGB PRO+
Product code	HTA516
Directivity diagram	cardioid
Capsule size	diameter 16mm
Maximum sound pressure level	125dB
Frequency range	20Hz-16kHz
Signal-to-noise ratio	≥66 dB
Bitrate	16 bits
Sampling frequency	44,1kHz/48kHz
Sensitivity	-41dB ±2dB
Resistance	600Ω
Cable length	2m
Connection	USB Type-C
Dimensions	130x55mm
Approximate weight	265 ±5g

Storage. Manufacturer's warranty.

The microphone should be stored in a clean, dry and ventilated place with an ambient temperature between +5 and 40%. Avoid contact with corrosive substances, keep the product away from fire and heat sources. Manufacturer's warranty

Provided that the user observes the rules of operation, and taking into account the warnings set forth in this user manual, th

device is safe to use and does not cause harm to the environment and humans, as well as is suitable for operation. The device has a warranty period 24 months from the date of purchase excluding the time of repair (subject to the rules of operation). The dight to warranty is granted by filling in the information of the attached warranty card, for more information about the product, as well as for any questions or suggestions, please contact us at the address below.

The warranty is provided in addition to the rights granted under local consumer laws, its terms may vary in different countries, Please read the full warranty information to learn about your consumer rights and additional remedies provided under this product warranty.

Instructions for use:

- Product cannot be gooded or modified

 Product cannot be gooded or modified

 Product cannot be the device or element to service it

 If the product is in an environment whose temperature or exceeds the permissible range, turn off the device and wait until the operating temperature stabilizes within the specified range

 Do not allow liquid to fall on the product

 Use the product only with certified signal sources
- Violation of the operating rules may lead to the loss of the ability to operate the equipment and the loss of the warranty

If the product doesn't work properly, contact HATOR' support, The warranty is in addition to the rights granted under local consumer laws. Its conditions may differ depending on the country

Some forms of exercising consumer rights when ensuring product warranty obligations can be performed through retail outlets (including online stores), which, in turn, are fully responsible for compliance with consumer rights protection laws.

The other for disposal of this product offer from the other for disposing of household exists, builde household or sents, the cross-bound be handed over to the approximate point of reception of electrical and electronic enginement for processing. Transfer to device to a specialized waste collection and disposal center or contact the salter from whom the device was purchased, in the contact of the device of the contact of

Supplier / Importer in EU: HATOR Gaming B.V., Address: Prins Hendrikkade 21-E, 1012TL Amsterdam, The Netherlands, sales⊚HATOR.gg

©2024 HATOR Gaming B.V. All rights reserved. All registered trademarks are the property of their respective owners.

